

Important

Before detaching the handle from the toothbrush be sure to remove the prickly tongue message surface from the toothbrush head. This will assure the best attachment of the double-stick tape to the toothbrush head.



Toothbrush head with message surface attached.



Message surface removed.



Double-stick tape attached.